



SELF TEST – Is your printer working properly?

The self test lets you know if your printer is operating properly. It checks the control circuits, printer mechanisms, print quality, ROM version, and DIP switch settings. This test is independent of any other equipment or software.

Running the self test

1. Make sure the printer is turned off and the printer covers are closed properly.
2. While holding down the FEED button, turn on the printer using the switch on the front of the printer to begin the self test. The self test prints the printer settings and then prints the following, cuts the paper, and pauses. (The PAPER OUT light blinks.)

self test printing.

Please press the PAPER FEED button.

3. Press the FEED button to continue printing. The printer prints a pattern using the built-in character set.
4. The self test automatically ends and cuts the paper after printing the following:

*** completed ***

The printer is ready to receive data as soon as it completes the self test.

Note:

If you want to pause the self test manually, press the FEED button. Press the FEED button again to continue the self test.